

# SmartScan Touch

Regular, Teaching and Meeting Versions and ColourActive Touch

## INSTALLATION DETAILS



### SMARTSCAN TOUCH AND COLOURACTIVE




### OPERATING INSTRUCTIONS

- The **SmartScan Touch** allows the user to control a group of Smart luminaires.
- Simply touch the desired function.
- An indicator LED will highlight the current status.
- Wireless communications are disabled, therefore the SmartScan Touch must be commissioned before use.



### DIMENSIONS

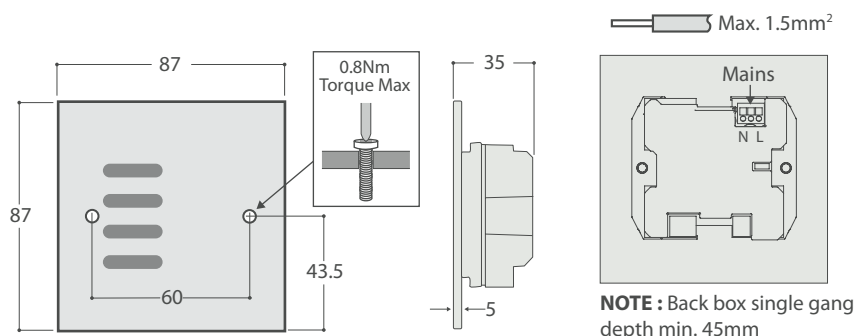

### FUNCTIONS

#### Function


- A** Return to automatic

#### Function (Default Settings)


- 1 Scene 1 - Smart luminaires to 50% fixed
- 2 Scene 2 - Smart luminaires to 25% fixed
- 3 Scene 3 - Smart luminaires OFF

#### Function


- 4 3000K colour temperature
- 5 4000K colour temperature
- 6 5000K colour temperature
- 7 6500K colour temperature

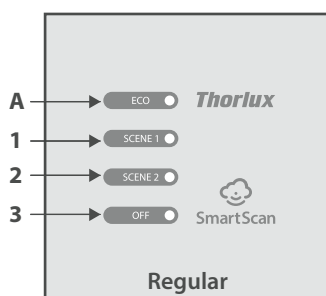

Regular

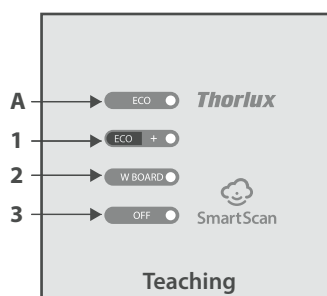


Teaching

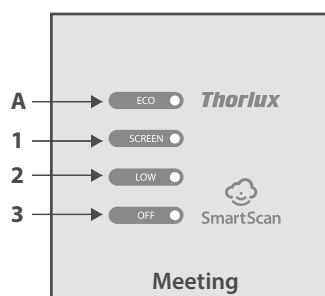


Meeting

**NOTE:** After selecting a scene there is a delay of 3 seconds before an alternate scene can be selected. A scene cannot be repeated within 15 seconds.

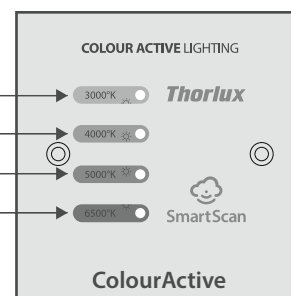


ColourActive

### POSITIONING

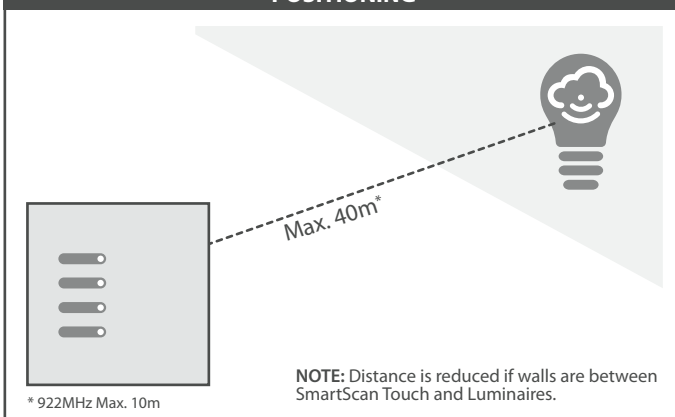

\* 922MHz Max. 10m

### SMARTSCAN PROGRAMMING/TESTING

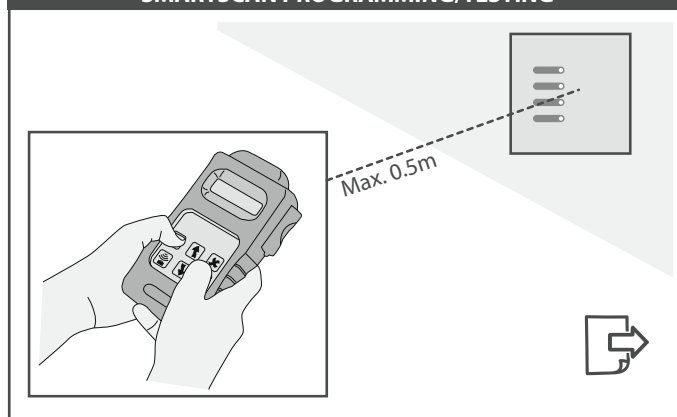

## PROGRAMMING

**SmartScan Touch** is programmed with the Smart Programmer. This device uses bi-directional infrared to program the **SmartScan Touch**. Ensure at all times, during use, only one device can be "seen" by the programmer

### PROGRAMMER


#### DISPLAY

On the first LCD line the actual menu point is displayed. On the second line, the status line, the possible settings for this menu point are shown. During a data transmission, the actual transmission status (as well as any error messages) is shown.

- Power : 4-off AA/1.5V battery (supplied)



catalogue no. **LCM 10777SS**

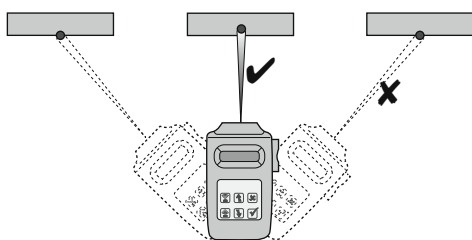

Only one **SmartScan device** in view of the programmer

## MODIFICATIONS

Thorlux products should not be modified. Any modification may render the product unsafe and will invalidate any Safety/Approval marks.

## MAINTENANCE

The **SmartScan Touch** should not be subjected to undue mechanical shock or extremes of temperature. Clean only with a clean dry cloth.

## PROGRAMMING BUILDING ADDRESS AND GROUP ADDRESS

	FUNCTION	BUTTON	DISPLAY
1	Switch on the Smart Programmer		
2	Scroll to the <Smart TR> menu		<Smart TR>
3	Select the menu <Smart TR>		download all <Smart TR only>
4	Scroll to the building setting		building: 123 address 1-254
5	To change the address press the (Select) button. (A Star in the upper corner indicates access of the program mode).		building: 123* address 1-254
6	Use the scroll buttons, to select the required address		building: 123* address 1-254
7	The (Send) button will now, update the chosen parameter in the SmartScan Touch		
8	Scroll to group address		group addr: 123 address 1-254
9	Select this parameter. Option name and current status are now displayed on the top line.		group addr: 123* address 1-254
10	Use the scroll buttons, to select the required address		group addr: 123* address 1-254
11	The (Send) button will now, update the chosen parameter in the SmartScan Touch		
12	Scroll to RF transmit		rf transmit: en enable/disable
13	To change between enable and disable press the (Select) button		rf transmit: en* enable/disable
14	Use the scroll buttons, to select the required function		rf transmit: en* enable/disable
15	The (Send) button will now, update the chosen parameter in the SmartScan Touch		
12	To exit the setting mode press (Esc). The new selected value will now be displayed on the first line.		group addr: 123 address 1-254

Now all parameters are memorised in the SmartScan Touch  
(Please Note - each SmartScan Touch can have unique parameters if required)

\* RF Transmit - can be enabled or disabled from the Smart TR menu.  
When disabled all radio transmissions are stopped.

**NOTE: The SmartScan Touch does not support any other functions from the programmer menu.**

## NOTICE TO CONTRACTOR - PLEASE PASS THIS LEAFLET TO THE END-USER



MERSE ROAD NORTH MOONS MOAT  
REDDITCH WORCS. B98 9HH ENGLAND  
e-mail: thorlux@thorlux.co.uk  
Web: www.thorlux.com  
+44 (0)1527 583200

Australia: www.thorlux.com.au ☎ +61 (0)2 9907 1261  
Deutschland: www.thorlux.de ☎ +49 (0)211 6956 0310  
Ireland: www.thorlux.ie ☎ +353 (0)1 460 4608  
UAE: www.thorlux.ae ☎ +971 (0)2 656 5842



FM 10913 EMS 532104